

600-R

Diaphragm Valve Manifold

Replacement Parts Installation Instructions



Handles shape may vary. Handles are press fit on stems. Remove by prying off with large screwdriver. Use vise to press on new handles. (Reuse spacer if required)



Bonnet (**Torque to 125 inch lbs. Retorque after 24 hrs. to 150 inch lbs.)



Stem (Lubricate Threads)



Washer Brass



Diaphragm Thin



Diaphragm Thick White.




Spring Assembly
- Button
- Spring



Manifold Body

**** Critical: Valve will leak if torque requirements are not followed.**

Warning! Always wear approved eye protection.

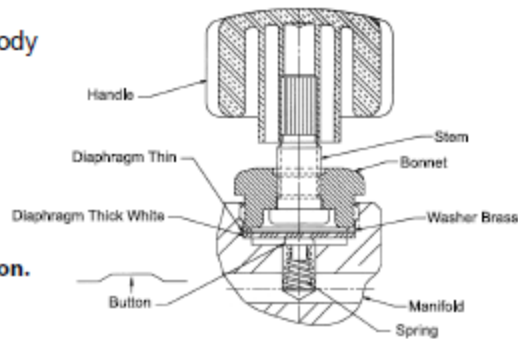

30333 Emerald Valley Parkway • Glenwillow, Ohio 44139 USA
www.imperial-tools.com • info@stridetool.com © 2014 Stride Tool Inc.

Made in USA with US and globally sourced components. All Imperial products are designed, engineered and quality tested in the USA.

08921586_D